

FINO Touch Control



A. Installation

This controller is installed inside the steam room only, and it comes with a built-in temperature sensor. The best location for the control is close to your bench for easy access, also further away from steam head. It is recommended to install the control pad from 36" up to the maximum 48" height.


Note: The controller is provided with a 25 ft standard-length connector cable. If you need to extend up to 50 ft, use 4-core wires (22 to 18 AWG).

B. Operation

Programme for temperature setpoint, time setting and the RV setting.

- Power Sign:** Turns on or shut off the steam. When the control is in standby mode, the power light stays on.
- Temperature control:** Controls the temperature set point in the steam room, which can set from 10°C(50°F) to 85°C(185°F). To change the temperature setpoint, just touch the **TEMP** sign for 3 seconds, while the control is on, then use the ▲ (Up) or ▼ (Down) to set it to desired value (hold it to change faster), touch the **ENTER** to save it.
- Time control:** Controls the duration of steam operation, which can be set from 5 to 90 minutes in 1-minute increments. The unit will work until it times out. To change the time setting, Touch the **TIME** sign for 3 seconds while the control is on, then use the ▲ (Up) or ▼ (Down) to set it on desired time (hold it to change faster), touch the **ENTER** to save it.
- RV control:** Controls the power output of steam operation, it can be set from 9 to 1, which means the unit kilowatts will be adjusted from maximum to minimum percentage, to ensure the best performance of bather's demand. To change the setting, Touch the **RV** sign for 3 seconds while the control is on, use the ▲ or ▼ to change, then touch **ENTER** to save it.
- Temperature/Time display:** When the control is turned on, it displays the current temperature in the steam room; By simply touch the temperature / time sign to switch the display on temperature or time. On the time display, it will show the minutes counting down.
- Celsius to Fahrenheit:** To switch the display reading between Celsius and Fahrenheit, first, turn off the control. Then touch the **TEMP** sign until the "F" or "C" turns on the display.
- Lights (LEDs):** There are 6 lights around the display, each indicating a status:

- **Power:** is on as control is off in standby mode.
- **TEMP:** is on when there is a call for steam.
- **TIME:** is on when timer is still counting down.
- *****: is on when program the RV setting.
- **°c:** is on when temperature is set for Celsius.
- **°f:** is on when temp. is set for Fahrenheit.

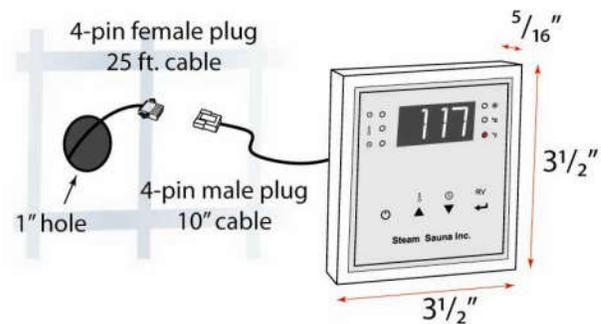

- Default Setpoints:** The control goes back to the following default settings if the power is interrupted.

- Temperature defaults: 47°C (117°F). Set range: (10 to 85°C)/(50 to 185°F).
- Time default: 30 minutes. Set range: 5 to 90 minutes.

Attention: The RV value must be set at 9 (Factory Default) for full operation when the control works with the RS/CS series.